


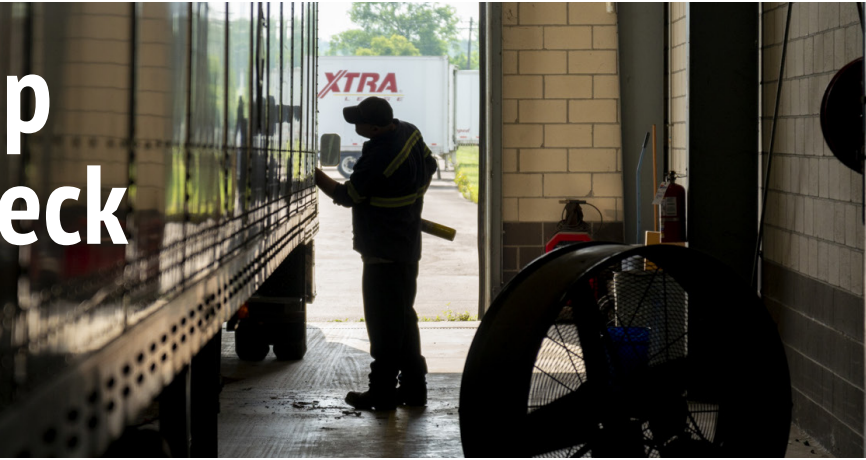

Standard Pre-Trip Maintenance Check

Performing these steps before each trip greatly reduces the potential of downtime or damage to the trailer.



ON ALL TRAILERS

- Inspect the trailer for damage.
- Check the tire air pressure and adjust if necessary.
100 PSI for radial tires.
- Check tires for damage or low tread. Repair or replace if necessary.
- Check wheel end for lubricant leakage.
- Check that all lights work and replace burned-out bulbs or LED lights.
Replace broken light assembly and lost lenses and reflectors.
- Check brakes. Make sure lining is at least 2/8" on drum brakes.
Check air lines for no rubbing or chafing.
- Check PM and FHWA date. Schedule inspection, if necessary.

ON REFRIGERATION UNITS

- Perform an electronic pre-trip before loading trailer. Check for any error codes.
- Maintain sufficient fuel supply in tank for continued operation.
- Refer to the reefer manufacturer for additional pre-trip checks you should perform.